

Assembly tips for bed Chania (Kreta)

Contents: 4 packages (Collis)



Package 1 contains the two side beams (Caution: approx. 57 kg heavy; best to transport and move with 2 people)



Package 2 contains the foot- and head-beams. The head-beam can be identified by additional holes for the headboard attachment.



Package 3 contains the headboard, the 3 crossbars for bed slats, and the 3 plastic feet with height adjustment function.



Package 4 contains the 4 feet, the two headboard supports, the screws and small parts kit.



Assembly tips for bed Chania (Kreta)

For assembly, please place a carpet underneath, please pay attention to the correct screw type, fix corners with flat head screws, and attach fittings with normal slotted screws.



Carefully screw the inserts into the feet using the Allen key; due to the natural wood structure, small, enlarged cracks may occasionally occur, but these will not be visible later when the feet are inserted into the outer frame.



The feet are fixed to the side frame from the inside using the long mounting screws.



When assembling the cross sides (head and foot end), a second person should always help so that the side panels remain in place.

Once the crossbeams are slid onto the rubber mounts, the bed has sufficient stability to secure the corner brackets. It is recommended to tighten the remaining three screws per corner by hand, carefully pulling the fittings onto the bed frame.



Assembly tips for bed Chania (Kreta)

When screwing on the support brackets, ensure that the metal brackets remain movable so that their position can be precisely adjusted to the frame.



Final adjustment should only occur after the cross braces are inserted into the bed frame.

The black leveling feet are mounted using three screws per foot; pay attention to the pre-drilled holes in the wood.



After inserting the crossbars at the desired fitting height, the fitting screws can be fixed from below (tightened).

Caution: The crossbeams can only be repositioned by loosening the screws, so the final height and therefore the insertion height for the slatted frame and mattress/futon should be checked beforehand.



When mounting the headboard bracket, make sure that the open drill holes (bottom) point inwards, so that the supports do not show any holes from the outside once attached.




Assembly tips for bed Chania (Kreta)

Screw the four mounting brackets into the headboard beam using an Allen key.



Then screw in the four pins for the headboard by hand.

Press the locknuts into the headboard supports so that the opening is open downwards for the 4 pins.

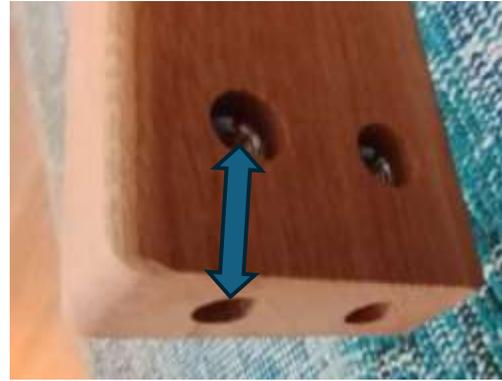

Place the headboard on the pegs.



Secure the locknuts in position with the small screws and tighten them so that the headboard does not wobble.



Seal openings with adhesive patches.



The new bed is finished.

